



ET&T DISTRIBUTORS INC.

Care & Cleaning Instructions



ET&T DISTRIBUTORS INC
947 Beville Rd Suite 15 S. Daytona Fl 32119
888-642-2226



WINDWARD FURNITURE CLEANING

POWDER COATED ALUMINUM FRAMES

Chlorinated water and saltwater can both be wearing on your furniture. Use a mixture of mild detergent and water to gently wash your frame of any dirt, salt or chemicals. Avoid using harsh chemicals or abrasive brushes. We recommend using your preferred car wax on frames at least once a year to protect and maintain the original luster.

VINYL STRAPS

For vinyl straps, use a mixture of water and a mild detergent. It is best to avoid using harsh chemicals or abrasive brushes.

UMBRELLAS

Only use mild detergent, soap, and warm water. Do not use harsh, discordant or abrasive chemicals or cleaners. Do not use bleach. Do not use wax. Read below for fabric cleaning instructions.

ALUMINUM TOPS

Wash aluminum tops using a mixture of mild detergent and water.

GLASS TOPS

Use soap and water, or your favorite glass cleaner, wash with a soft sponge or cloth.

ACRYLIC TOPS

Clean acrylic tops using soap and water only.

FIBERGLASS TOPS

Maintain the look of your fiberglass top by washing it with a mixture of mild detergent and water. Avoid using harsh chemicals or abrasive brushes. Periodic waxing with fiberglass polish is recommended.

FAUX STONE TOPS

Maintain the look of your Faux Stone top by washing it with a mixture of mild detergent and water. Avoid using harsh chemicals or abrasive brushes.

NYLON GLIDES

Nylon glides are used to protect your furniture and to protect the floor it is placed on. Glides are not warranted but can be easily replaced.

MARINE GRADE POLYMER

Clean everyday dirt and stains with a cleaner, such as Soft Scrub and a dish sponge. Tough stains on MGP can be soaked in bleach.

WICKER

Clean wicker weave using a mixture of water and mild detergent with a soft sponge or cloth. Rinse clean.